

Table layout

SP Net info 12

Uploaded: 18.10.1999
Latest revision: 30.03.2020

To modify the design of result tables right click on a table header and chose Table settings (or use from the top menu bar Table > Table settings (F2)). Here you choose the columns to be shown, the width of the columns, alignment of the contents in the columns etc. The order in which the columns appear can be rearranged by “drag and drop” in the window Columns on the index card Column setup or in the table itself. Table settings also gives you access to Table layout and Page format. Here you pick your paper format, choose width of margins, position of company logo etc.

Once you have settled upon a design that can be reused in future projects, this design can be saved globally. You can save it under a name of your own choice in any folder; in that case you must load the setup yourself each time you want to apply it. Or you can overwrite the existing file TAB_LAYOUT.FMT in the Globdata-folder on your harddisk. The file TAB_LAYOUT.FMT contains the default table setup, which SoundPLAN copies every time a new table is created. In this way your tables will be born the way you want it to appear.

When you close a table, the current format is automatically saved and reused if you open the table again. If you have recalculated the run with a new assessment record since the table was open last time you must reset titles. This is also done from Table settings.